


NOTE: ONCE THE TRENCH IS DUG AND THE FABRIC AND LINER IS INSTALLED FILL THE TRENCH WITH WATER TO ENSURE THERE ARE NO LEAKS IN THE LINER PRIOR TO INSTALLING THE CHAMBERS AND BACKFILL.

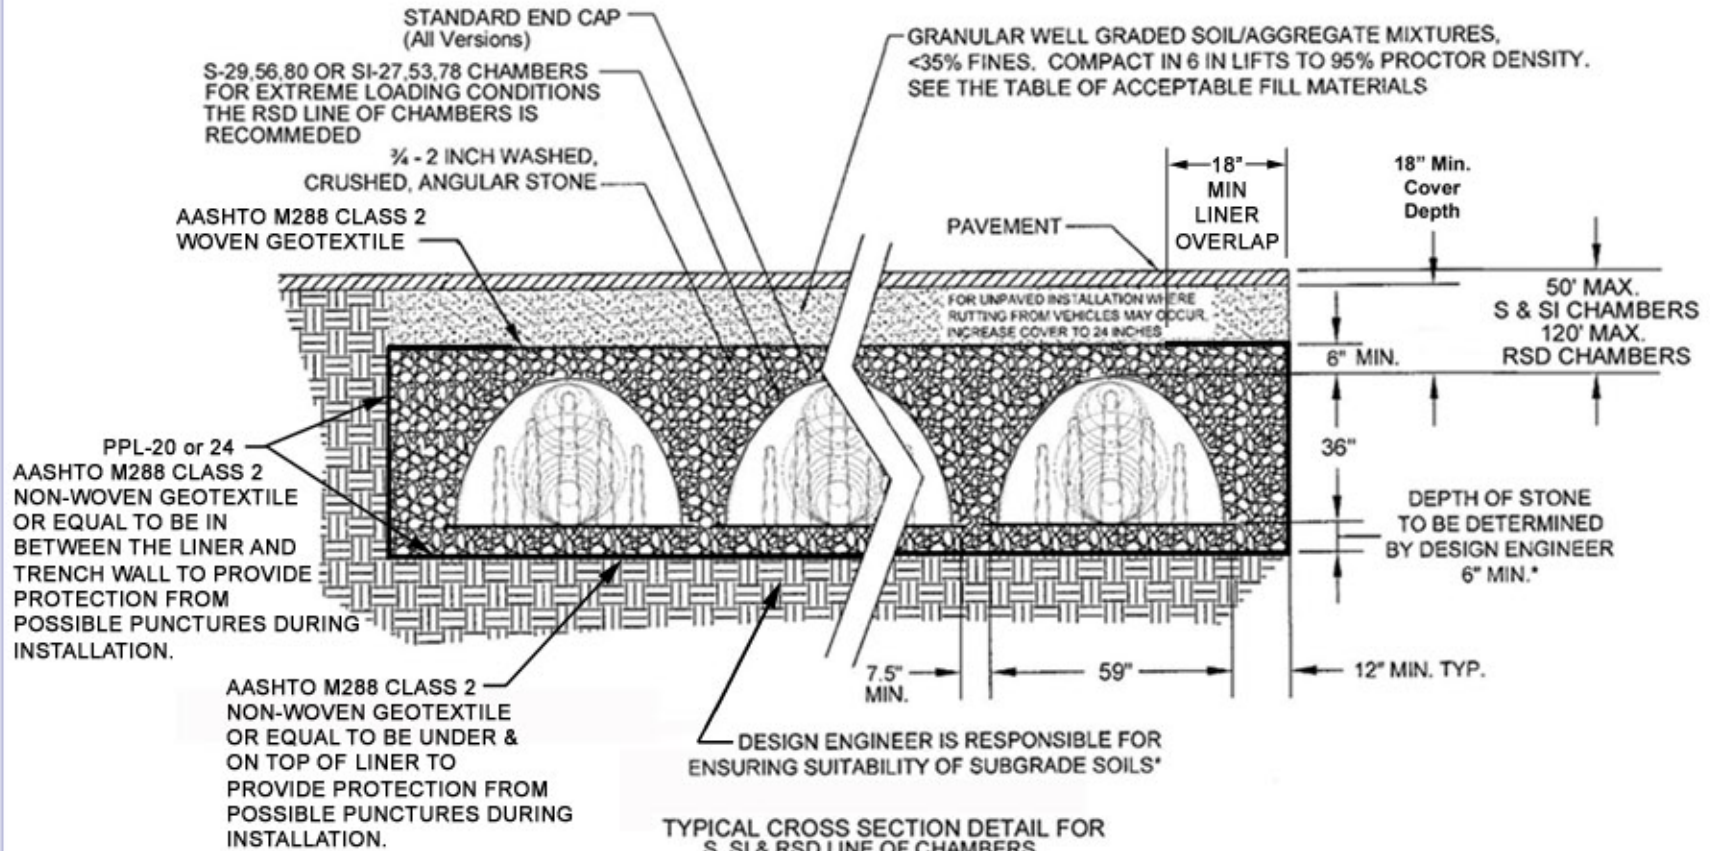

TYPICAL CROSS SECTION DETAIL FOR S, SI & RSD LINE OF CHAMBERS
* NOT TO SCALE*

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF TRITON STORMWATER SOLUTIONS. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF TRITON STORMWATER SOLUTIONS IS PROHIBITED.

		UNLESS OTHERWISE SPECIFIED:	NAME	DATE	TITLE:
		DIMENSIONS ARE IN INCHES	DRAWN		SINGLE STACK DETENTION
		TOLERANCES:	CHECKED		
		FRACTIONAL ±	ENG. APPR.		
		ANGULAR: MACH ± BEND ±	MFG APPR.		
		TWO PLACE DECIMAL ±	Q.A.		
		THREE PLACE DECIMAL ±	COMMENTS:		
		INTERPRET GEOMETRIC TOLERANCING PER:			
		MATERIAL			
		FINISH			
NEXT ASSY	USED ON			SIZE	DWG. NO.
				A	REV
APPLICATION		DO NOT SCALE DRAWING		SCALE:	WEIGHT:
				SHEET 1 OF 1	

